




Pattern Contains
Paper Instructions
Paper Tooling Pattern


Finished Wallet Size
7 3/4" x 7"

Instructions: Roper Wallet Interior

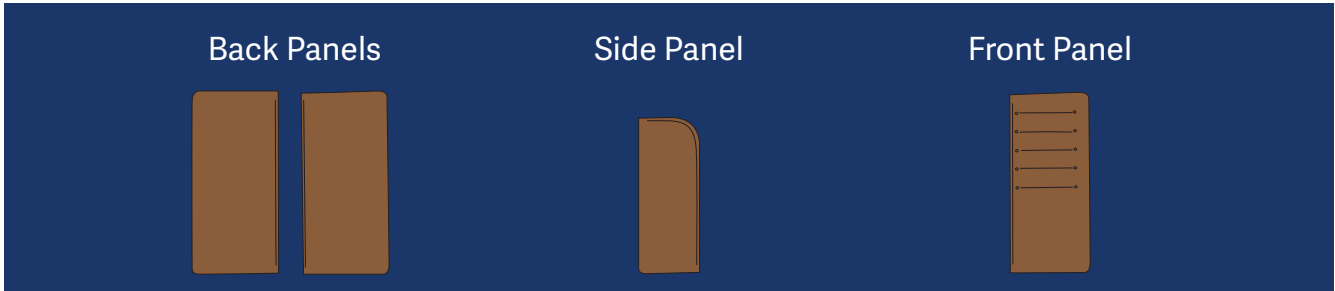



1 Tool, stamp, stain, and finish the wallet back, if desired, before installing pockets.

2 Apply 1/8" contact cement to the 3 borders with rounded edges on the flesh side of pockets A, B and C, as shown below in green.

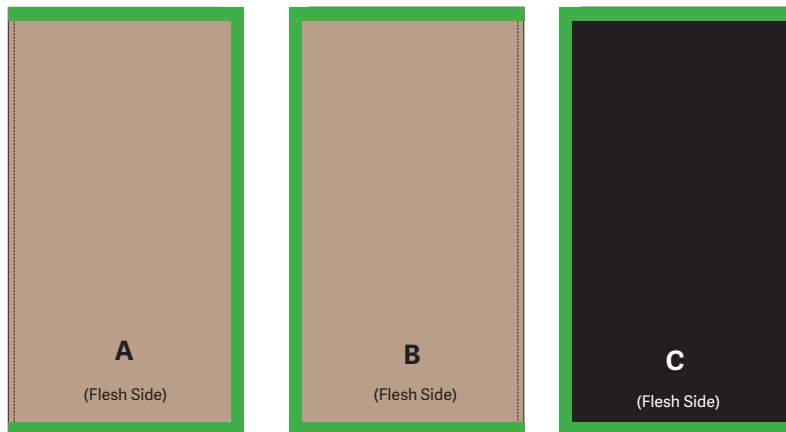


3 On the flesh side of flap D, apply 1/8" of contact cement to the outside edges, as shown below in green.

4 Stick pocket A and B down to the flesh side of your wallet back, making sure to align the outside edges and corners, as shown.

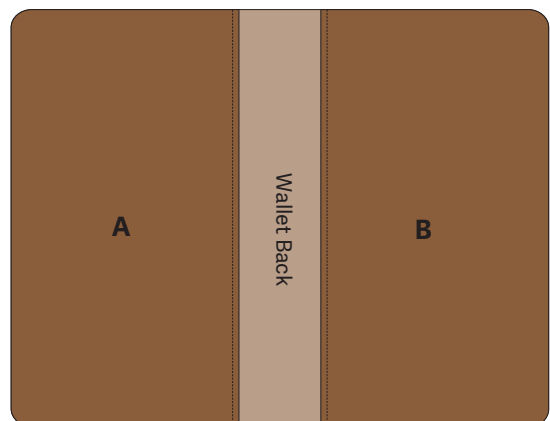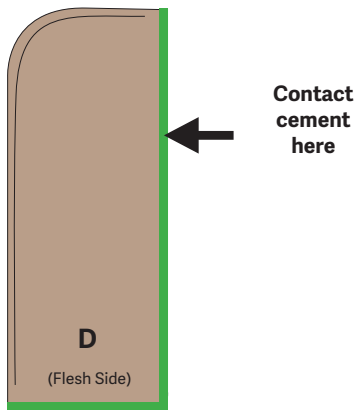


5

Stick pocket C on top of pocket B, making sure the outside edge aligns with the outside edge of your wallet back, as shown in Step 5b.

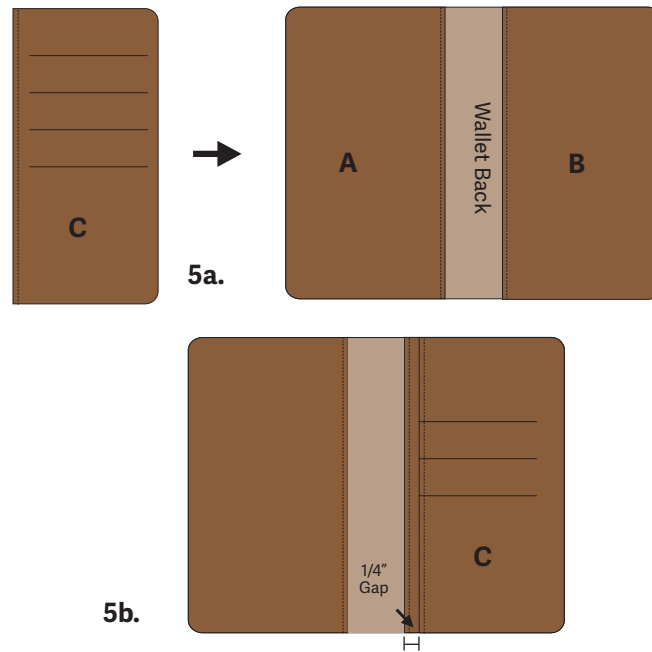


6

After sticking down pocket C, stick flap D on top of pocket A, making sure the bottom and left edges align, as shown in Step 6a.

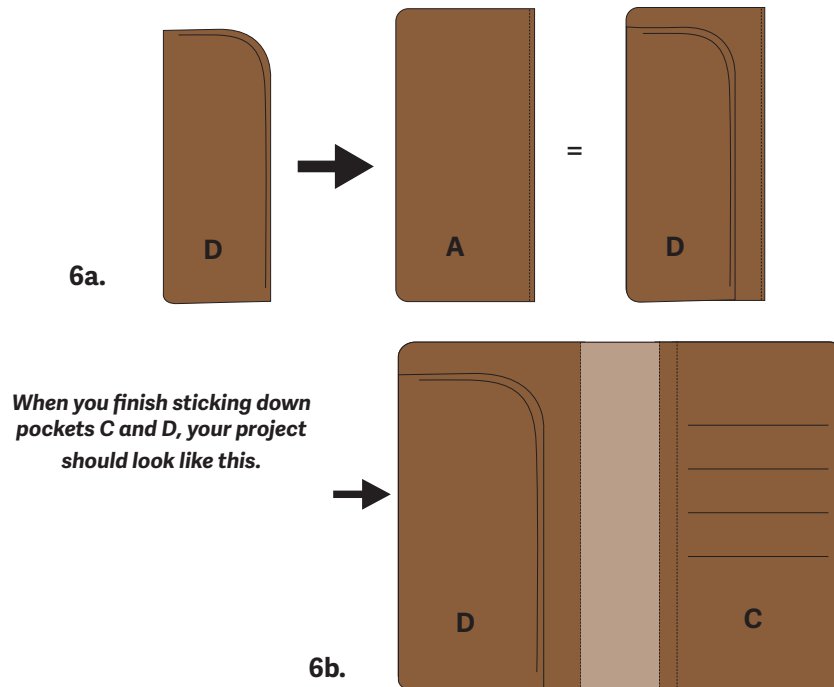

7

Lace or stitch around the perimeter of the wallet. See our lacing and stitching guide for further direction. Congrats! You're finished!

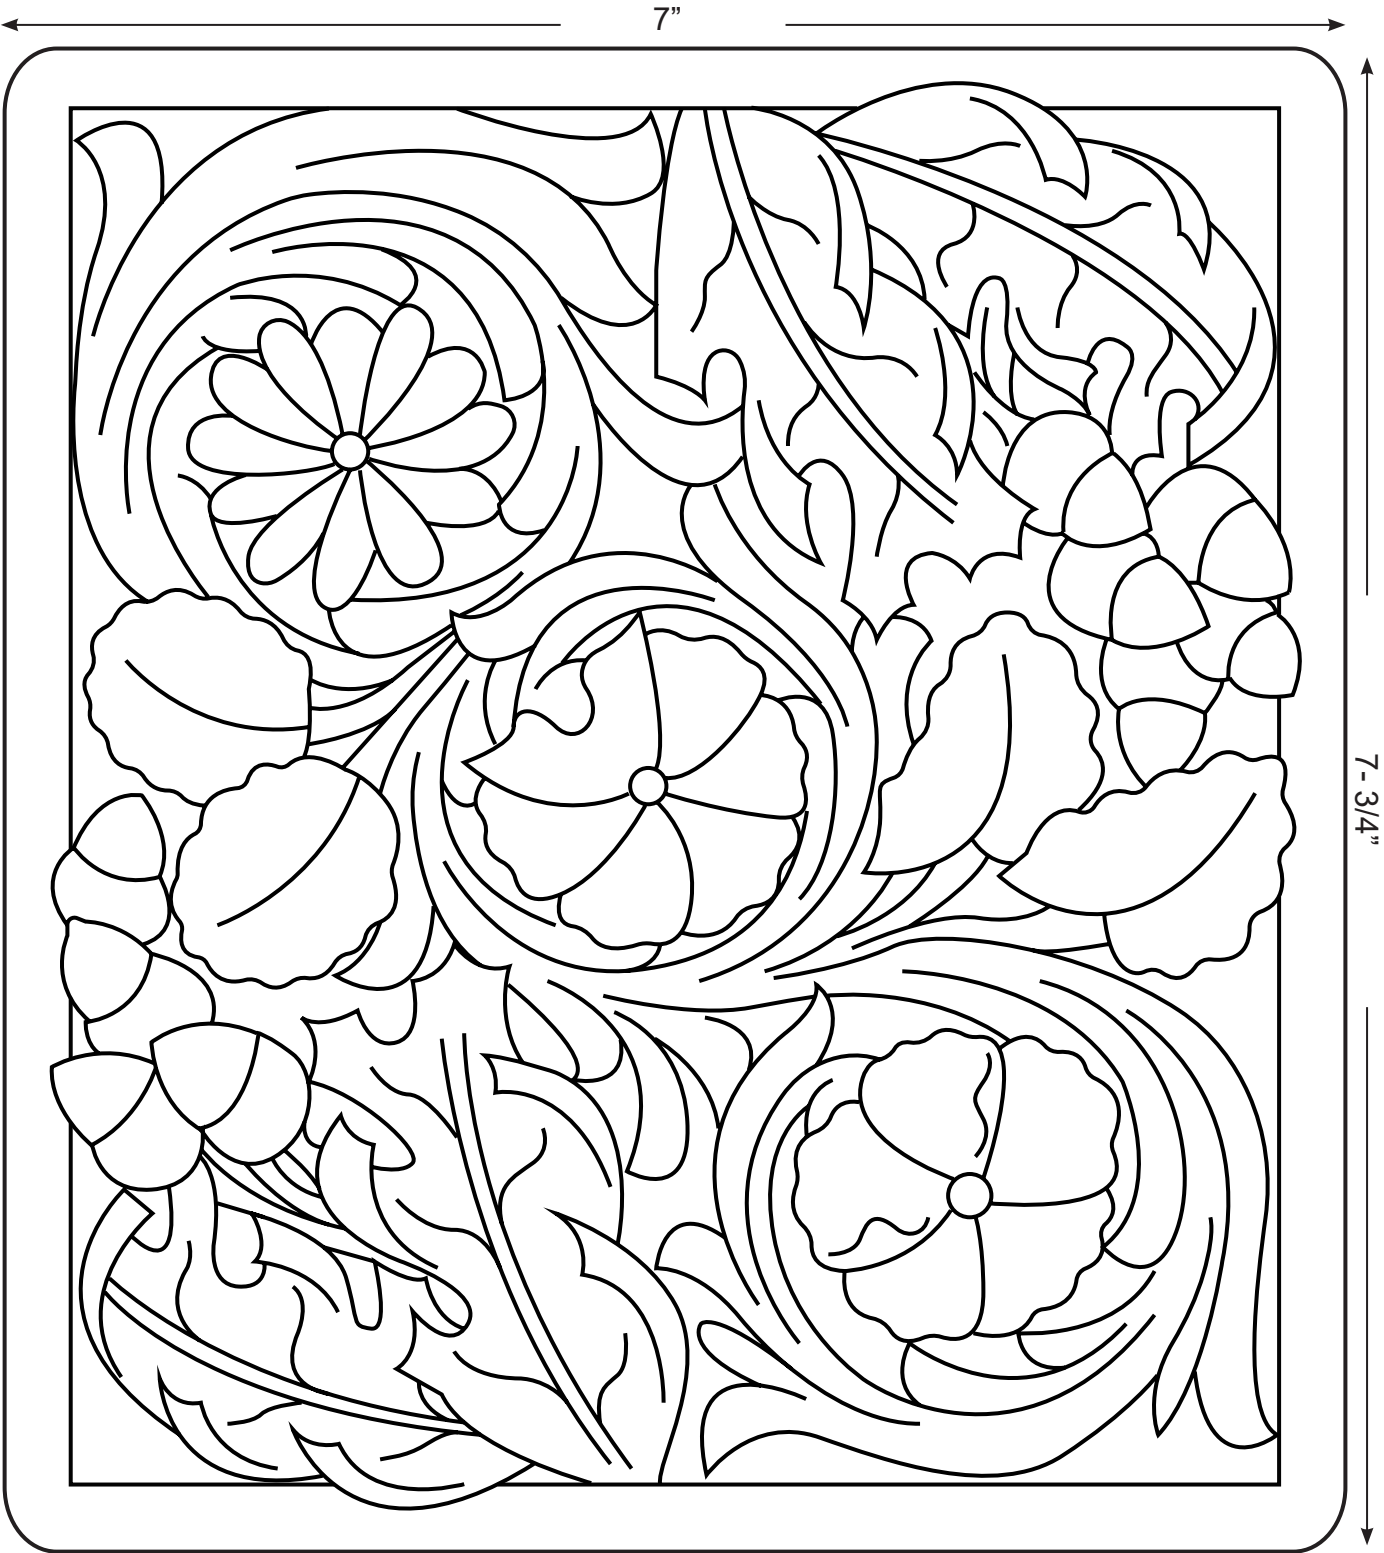

Actual Size



PB016

PB012

B60

PB013

S706

S866

SKP861

Swivel
Knife

U855

SKP861

V821

B60

B60

4855

PV030

PV030

U851

S632

